

Genuine
LIBERTY
SAFE

ACCESSORIES

INCLUDES 4 CONCRETE BOLTS



TOOLS REQUIRED

HAMMER DRILL



1/2" SOCKET SET



SHOP
VACUUM



HAMMER




©2013 Liberty Safe & Security
Products, Inc.

www.libertysafe.com
(800) 247-5625

CONCRETE INSTALLATION INSTRUCTIONS (10915)

Remove pallet and place safe in desired location. Follow these instructions to secure your safe to the floor:

1. Open door and remove floor caps under floor panels.

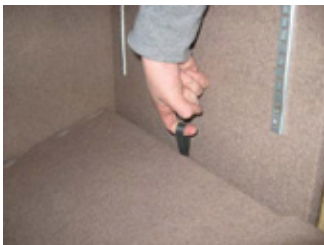

2. Drill a hole in each of the 4 anchoring locations with a hammer drill using a 3/8" concrete drill bit. Drill hole approximately 3" deep.
3. Use a vacuum to clean up debris created from drilling holes.
4. Hammer anchor bolts into holes and tighten using a 1/2" socket set.
5. Replace floor caps and floor panels

NOTE: Anchoring kits are the #1 security add-on for safes. Available for both wood and concrete floors. While a safe offers burglary protection, and anchoring the safe to the floor provides additional protection, with enough time any safe can be forcibly entered or removed from its secure location. It is impossible to build or install a "burglary-proof" safe.